

## Installation:

**NOTE:** Skimmer gaskets DO NOT come with the SkimSaver™ LID'L SEAL™. On new pool installations simply install the new gaskets that came with your skimmer. ON existing pools it is highly recommended that you replace your skimmer gaskets when installing LID'L SEAL™.

\*If gaskets are torn or show any wear they MUST be replaced.

### Items Required:

#3 Phillips head screwdriver

O-Ring lubricant

New skimmer gaskets (see recommendations above)

### Preparation:

New Pools: LID'L SEAL™ should be installed prior to completely filling your pool with water.

Existing Pools: Drain pool water just below the skimmer's opening, 1"-2". Assemble required items.

### Installation Instructions:

1. Remove existing skimmer faceplate using a #3 Phillips head screwdriver. Keep the screws; you will be using them to reinstall your SkimSaver™ mounting plate.
2. Inspect gaskets and replace if necessary. See above recommendations.
3. Align gaskets and new SkimSaver™ mounting plate against skimmer opening and reinstall existing screws. Hand-tighten using a #3 Phillips head screwdriver. DO NOT OVER TIGHTEN.
4. Apply a thin bead of Magic Lube® along the inside lip of the flexible lid to ensure a water tight seal.
5. Now when you are ready to seal off your skimmer - simply snap on the LID'L SEAL™ pressing firmly around the entire perimeter for a positive seal.

No need to drain your water again! In the future, LID'L SEAL™ will simply snap on and peel off. The SkimSaver™ mounting plate will remain permanently installed on your skimmer. Use the LID'L GUARD™ during the swim season.