

Identifying Questions That Help

1. Does your control box have a **RED BUTTON**?
 1. If YES they have a LiftOperator System (See LiftOperator Page)
 2. If NO they have the LINAK System (See LINAK Page)

2. Does your hand controller have **2 buttons** or **4 buttons**?
 1. If 2 buttons they have a MultiLift – (LiftOperator system ONLY)
 2. If 4 buttons they have one of the following: PAL, SPLASH! or aXs lift

3. Does the control box require an activation key to operate?
 1. If YES then they have a keyed control box
 2. In NO then they have a standard control box

By discovering the answers to the above questions you can pinpoint the lift, control box, battery and hand controller types.



LiftOperator™

4 Button LiftOperator
Not Keyed = 1001499
Keyed = 1001499K



4 Button Hand Controller
Part# 100-4000A



Battery-LiftOperator
Part# 1001495



Charger-LiftOperator
Part# 1001530



LiftOperator Upgrade Kits

Kit comes with Mounting plate, lock, battery, charger and LiftOperator Control Unit.

- 1001550 – 4 button kit
 - 1001555 – 4 button kit keyed
- Upgrades any older model PAL, Splash! or aXs Lifts

LiftOperator – Activation Keys

- 1001515 – Set of 4 keys

2 Button LiftOperator
Not Keyed = 1001518
Keyed = 1001518K

2 Button Hand
Controller
Part# 100-4200A



LINAK – Lift Parts

Control Unit – LINAK
Part# 100-1000A



4 Button Hand Controller
Part# 100-4000A



Battery-LINAK
Part# 100-2000



Charger-LINAK
Part# 100-3500

